


TYPE A CURB & GUTTER

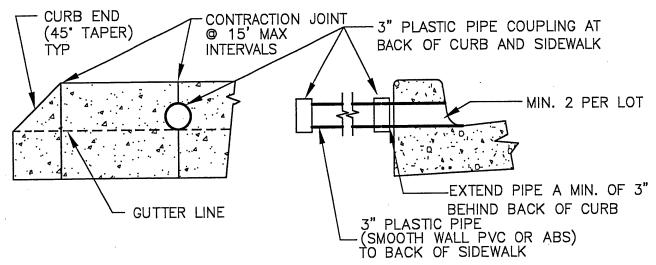

WEEP HOLE THROUGH CURB

NOTES:

- 1. CONTRACTION JOINTS SHALL BE PLACED AT 15' MIN. INTERVALS AND SHALL EXTEND AT LEAST 50% THROUGH THE CURB OR CURB AND GUTTER.
- A CONTRACTION JOINT SHALL BE PLACED ALONG AND OVER WEEP HOLE THROUGH THE SIDEWALK.
- 3. ALL CONCRETE SHALL BE 3300 PSI @ 28 DAYS.
- 4. WHERE SIDEWALKS ARE TO BE CONSTRUCTED, EXTEND 3" PIPE TO BACK OF SIDEWALK LOCATION & INSTALL COUPLING.
- 5. INSTALL MIN. 2 WEEP HOLES ON ALL LOTS. ONE WEEP HOLE TO BE AT LOW END OF LOT FRONTAGE, 5' FROM P/L.
- 6. WEEPHOLES IN EXISTING CURBS SHALL BE CORE DRILLED.

LAST REVISION DATE:

JULY 2015

TYPE 'A'

CURB AND GUTTER

AND WEEP HOLE

(NTS)

DETAIL NO.

SILVERTON, OR

210